

SHOWER HEAD SOAP DISPENSER

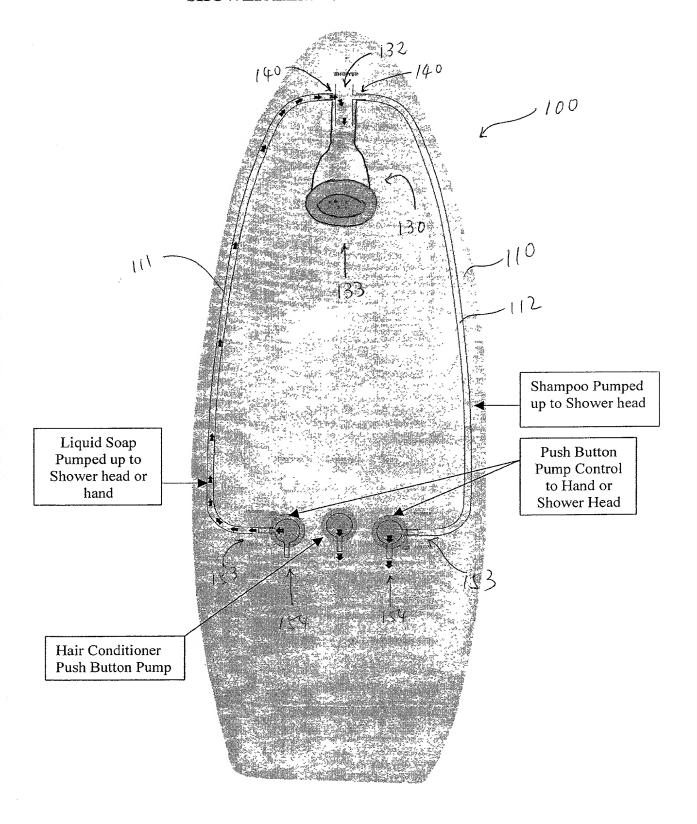
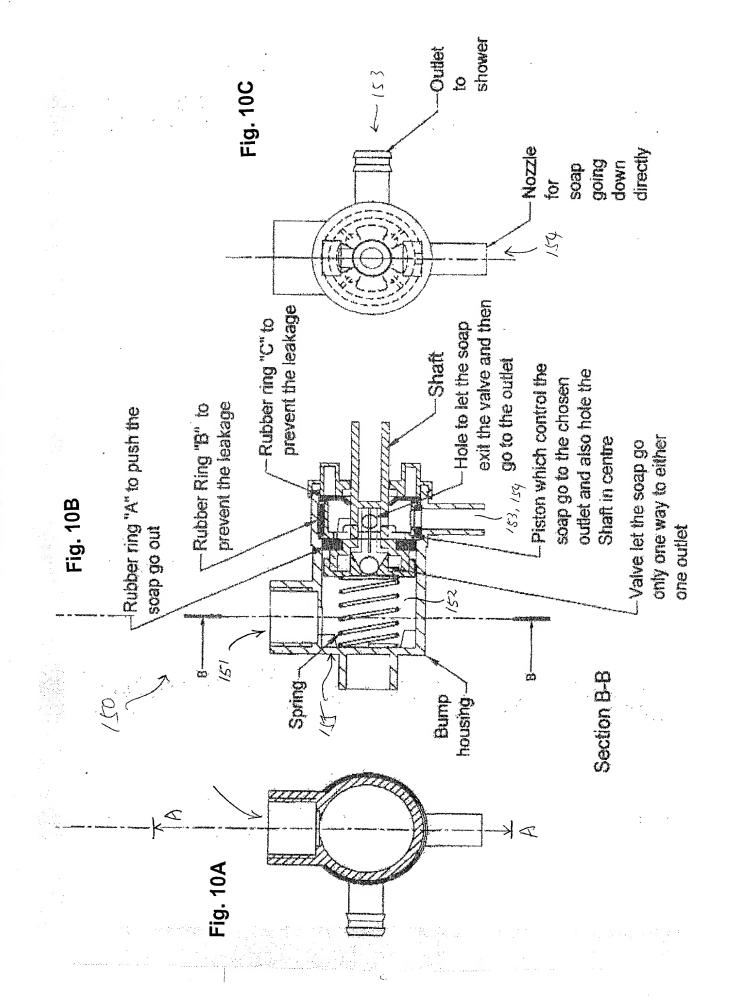


Fig. 2




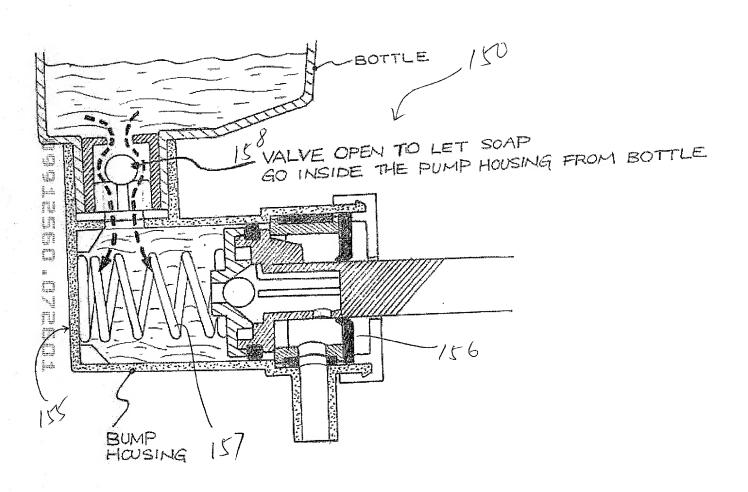


Fig. 11A

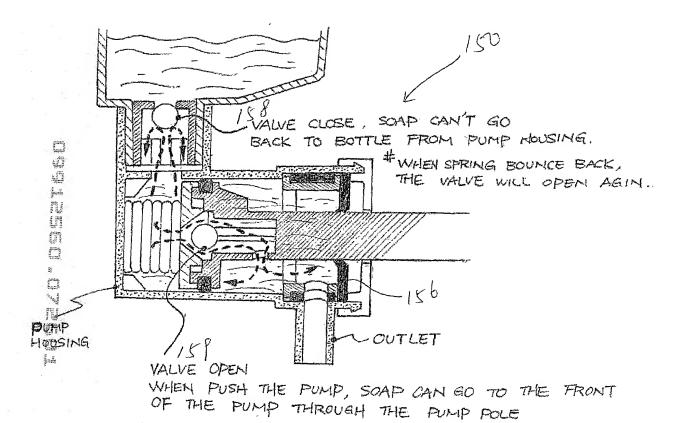

WHEN SPRING BOUNCE BACK, THE VALVE WILL CLOSE & DON'T LET THE SCAP GO BACK TO REAR OF PUMP HOUSING. IT WILL ALSO PUSH THE SCAP, IN FRONT OF PUMP HOUSING, OUT THROUGH OUTLET TO SHOWER HEAD OR DOWNWARD.

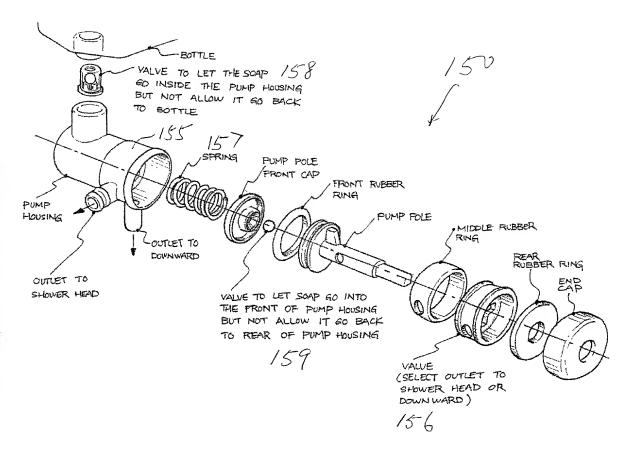


Fig. 12

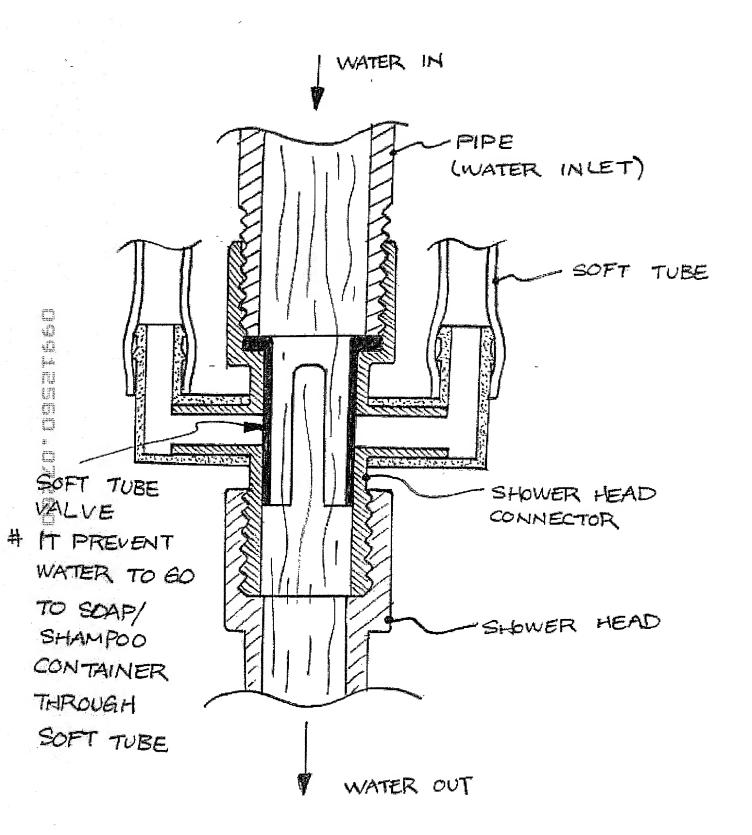


Fig. 13A

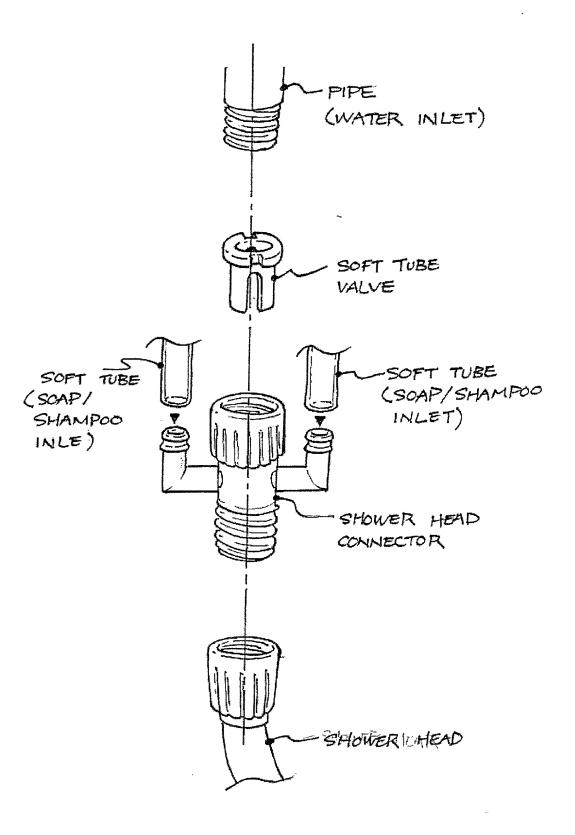


Fig. 13B